

LESS

LESS collection of armchairs with a refined design and soft shapes with backrest and seat in mesh

1



2



3



4



DIMENSIONS

1 . 2 . Armchair with low backrest

L 68/50 P68/46 HT 102/115 HS 45/58

3 . 4 . Armchair with high backrest

L 68/50 P68/46 HT 122/135 HS 45/58


SEAT & BACKREST

LESS

Less is characterised by a monocoque frame in black or white polypropylene. High performance self-supporting shrink-wrap and comfortable KR mesh in chenille is applied to the frame.

PADDING

The mesh is available in 3 colors:

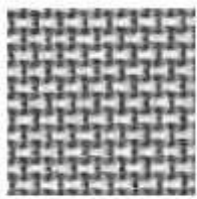

158



159



160

1. 425 GR/ML
 2. 68% POLIESTERE 32% POLIAMMIDE
 3. DIN EN 1021:2014
 4. DIN EN ISO 12947-2:2017
- 70.000 cicli / rubs

MECHANISM

Less benefits from a permanent tilt mechanism in the operating position and free oscillation. The gas column is corresponding to DIN 4550 norm and exceed the 4° level.

BASE

It is available with two different 5 spoke on castors bases (standard in black nylon with double tread diameter 65mm):

1. White or black polypropylene base "TREND". [d. 680 mm]
2. Polished aluminium base "TREND". [d. 680 mm]

ARMRESTS

1. Fixed armrests in black or white polypropylene.
-

LESS

USAGE AND CARE

For a proper maintenance of the products and to maintain unchanged the characteristics of the materials, we recommend to follow some very simple care instructions.

FABRICS

Cleaning: check the dedicated selection written on the color Swatch card. Usage: it is recommended to pay attention to the fabrics as they can be easily cut or ripped.

METALS

Cleaning: both steel or aluminium surfaces, and painted ones, must be cleaned with a soft and wet cloth with hot water. For the most persistent stains, a small amount of liquid soap diluted in water may be used. We always recommend to dry immediately with a soft cloth or a leather one after the cleaning process. Never using cleaning products for steel, chlorine, bleach or other strong detergents. It is not recommended to use abrasive creams, score pads and abrasive sponges that can scratch the metal surfaces. Usage: pay attention to the stains of food such as coffee, coke, fruit juices that can leave indelible marks on the surface.

WARRANTY

QUINTI guarantees the products will maintain their properties for 6 years from delivery, except normal usury and provided that they will be used according to the guidelines given. QUINTI will replace, free of charge, any product found non-compliant with this warranty, without incurring any other liability of sort. Components, external accessories or materials supplied by the buyer and applied to the products in order to customize them will not be supported by the guarantee. For an optimal maintenance of the products and to keep unchanged the characteristics of the materials with which they are made, some simple attentions are necessary.