

WORD NET **Quinti**[®]

Advanced directional armchair from Quinti collection. The main feature is the structure made with a square tubular 25x25 available in the white and chromed versions.

Base

Two bases are available:

1. In aluminum 670 mm, "Loop" type or black painted
2. Cantilever structure, chromed or black sled base

Casters

Double tread diam 65 mm, standard or rubberized, both can be free [standard] or self-braking. The feet in polyamide are interchangeable to the casters with the same locking pin at the base.

Elevation

All Quinti's gas columns are in accordance with the DIN 4550 norm and they exceed the fourth level.

Mechanics

M5 the standard configuration of the chair supposes a tilt single lever mechanism with gas command, height and block in operative position. It has a wheel for the variation of the tilt rigidity. The main body is entirely made out of die-cast aluminum.

M4/M3 the point of rotation of this mechanism is advanced. The blocking lever allows the blocking process in 3 positions with a backstop system of the seat. It has a wheel for the variation of the tilting rigidity. The main body is entirely made out of shiny or black die-cast aluminum.

Armrests

Couplet of armrests in chromed or black metal [standard]

Seat & Backrest

Seat and backrest are made up of a monocoque in chromed square tubular 25x25, inside this a self-supporting structure is integrated through two steel tie-rods.

Net


The World's **Net Plus** net is in PVC high resistant with a texture made up of a chenille tread and in PVC which confer to the seat a major comfort.

Available in three colors:



WORD NET **Quinti**[®]

DIMENSIONS

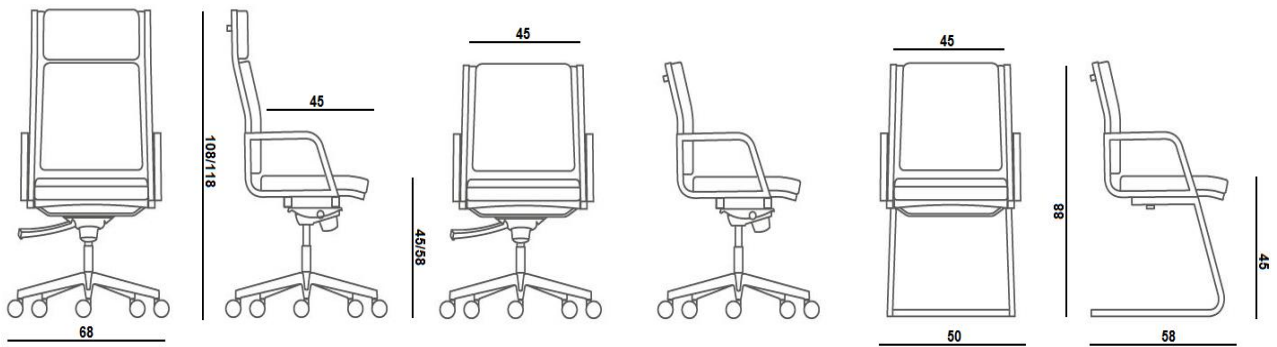

USE AND CARE

For a proper maintenance of the products and to maintain unchanged the characteristics of the materials, we recommend to follow some very simple care instructions.

FABRICS

Cleaning: check the dedicated selection written on the color Swatch card. Usage: it is recommended to pay attention to the fabrics as they can be easily cut or ripped.

METALS

Cleaning: both steel or aluminium surfaces, and painted ones, must be cleaned with a soft and wet cloth with hot water. For the most persistent stains, a small amount of liquid soap diluted in water may be used. We always recommend to dry immediately with a soft cloth or a leather one after the cleaning process. Never using cleaning products for steel, chlorine, bleach or other strong detergents. It is not recommended to use abrasive creams, score pads and abrasive sponges that can scratch the metal surfaces. Usage: pay attention to the stains of food such as coffee, coke, fruit juices that can leave indelible marks on the surface.

WARRANTY

QUINTI guarantees the products will maintain their properties for 6 years from delivery, except normal usury and provided that they will be used according to the guidelines given. QUINTI will replace, free of charge, any product found non-compliant with this warranty, without incurring any other liability of sort. Components, external accessories or materials supplied by the buyer and applied to the products in order to customize them will not be supported by the guarantee. For an optimal maintenance of the products and to keep unchanged the characteristics of the materials with which they are made, some simple attentions are necessary.